 


## Account

 
Automatically displays the default profile picture when first logging in.

Select a photo stored in Dynalink Photos as your profile photo.

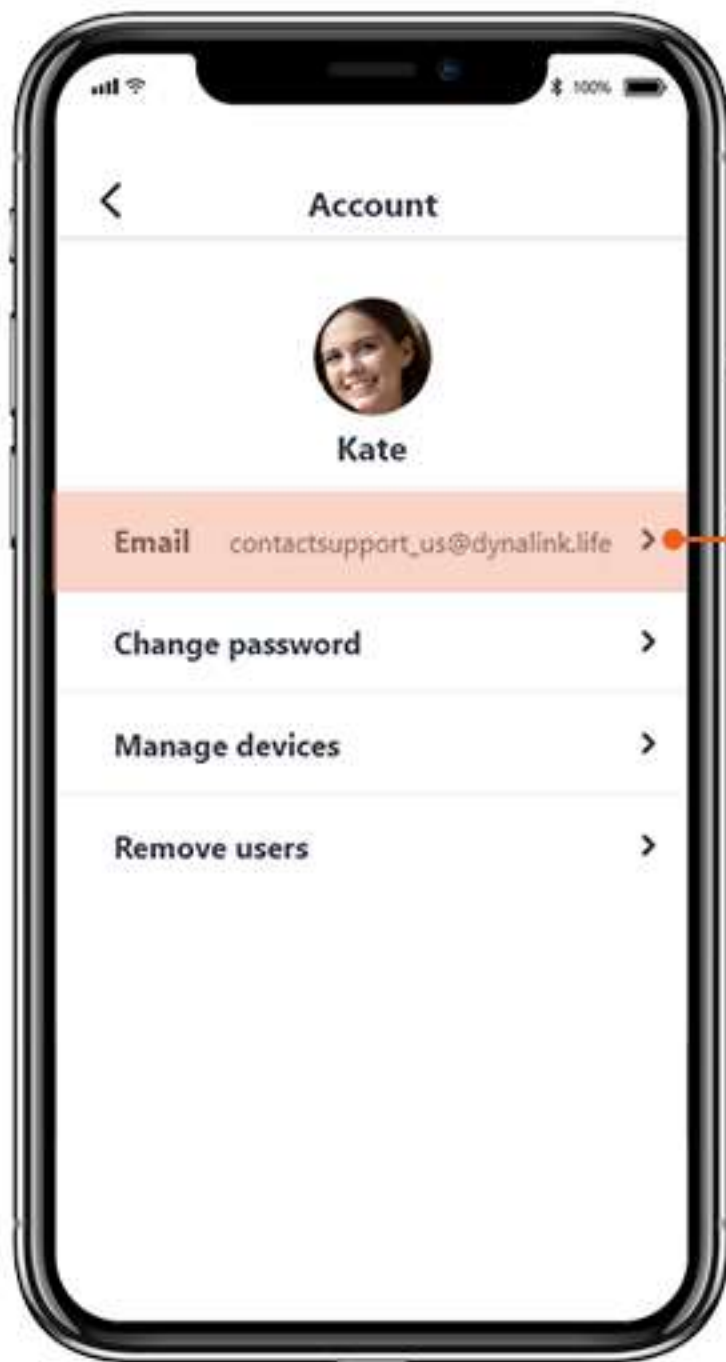


## Email Address

Enter and verify your email address for rescuing your forgotten password.

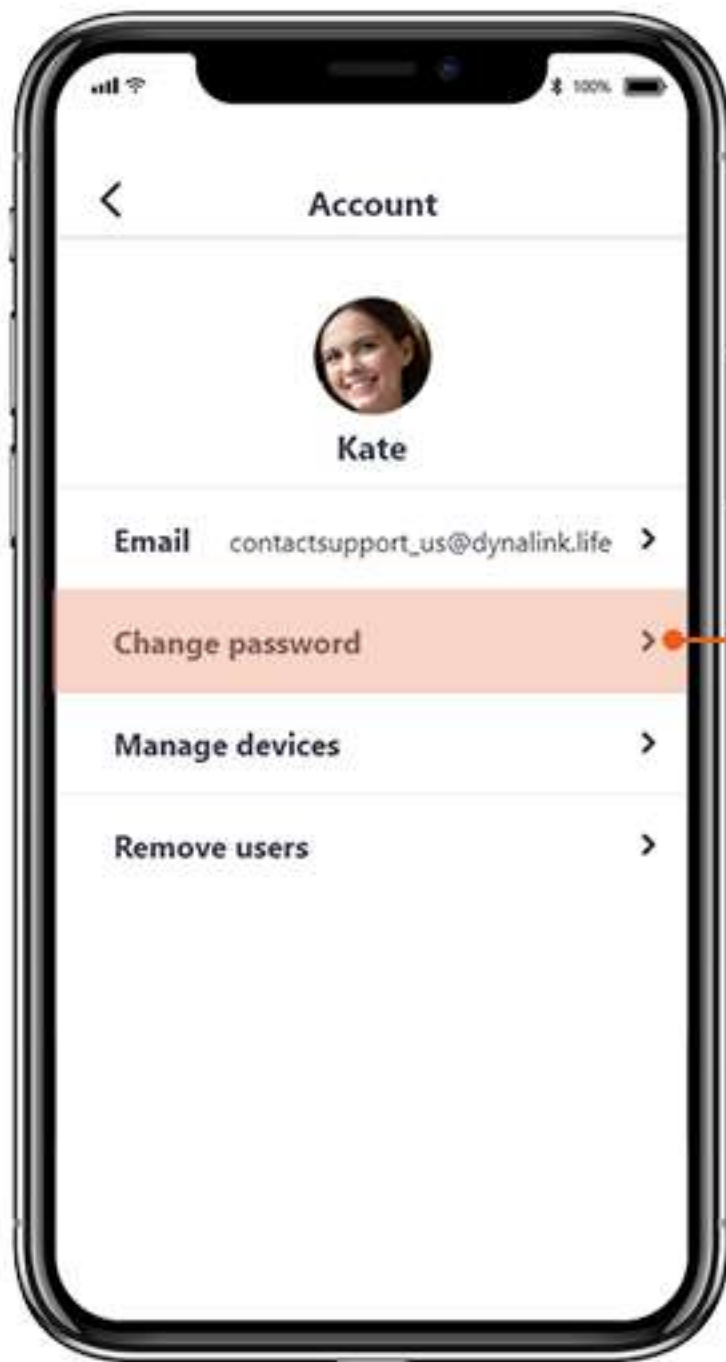

## Change Password


Reset your password.

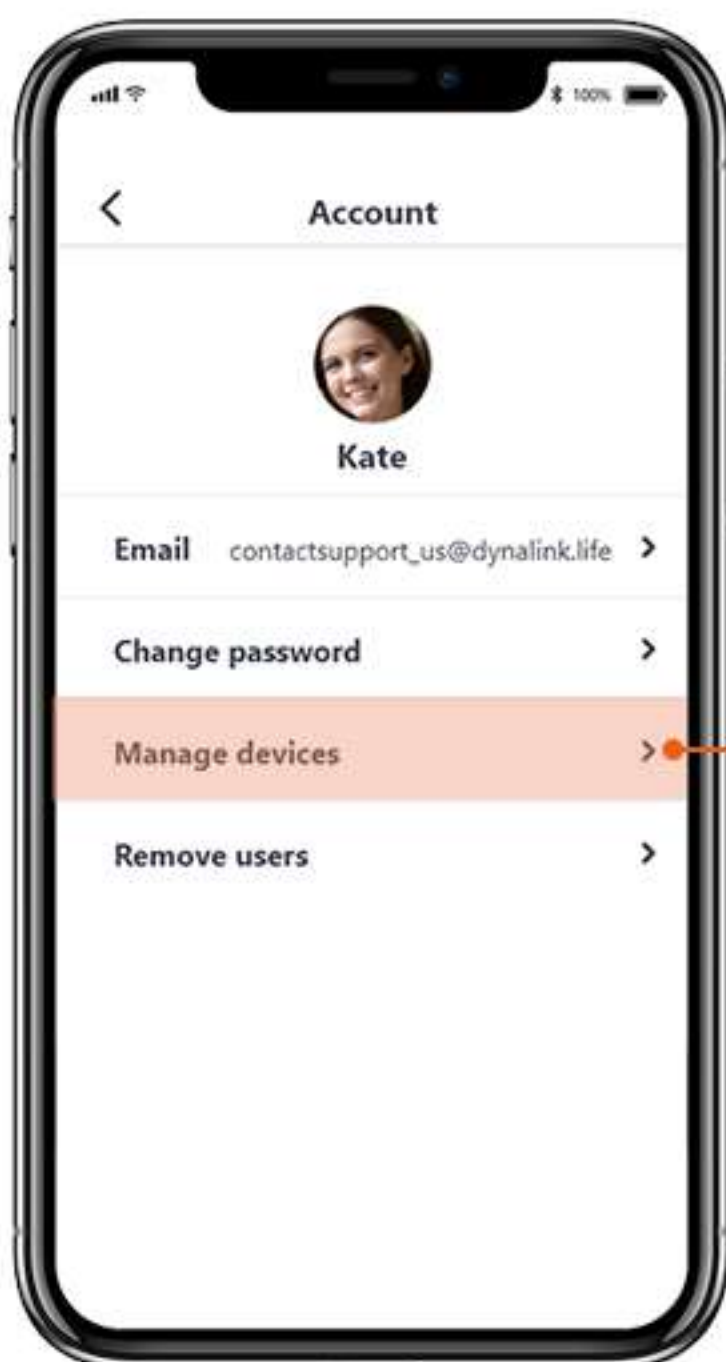

## Manage Devices

Manage all devices connect to Dynalink Photos.

- 1.The devices list here are able to log in without entering your account and password.
- 2.If you do not recognize the device shown here, please remove it.

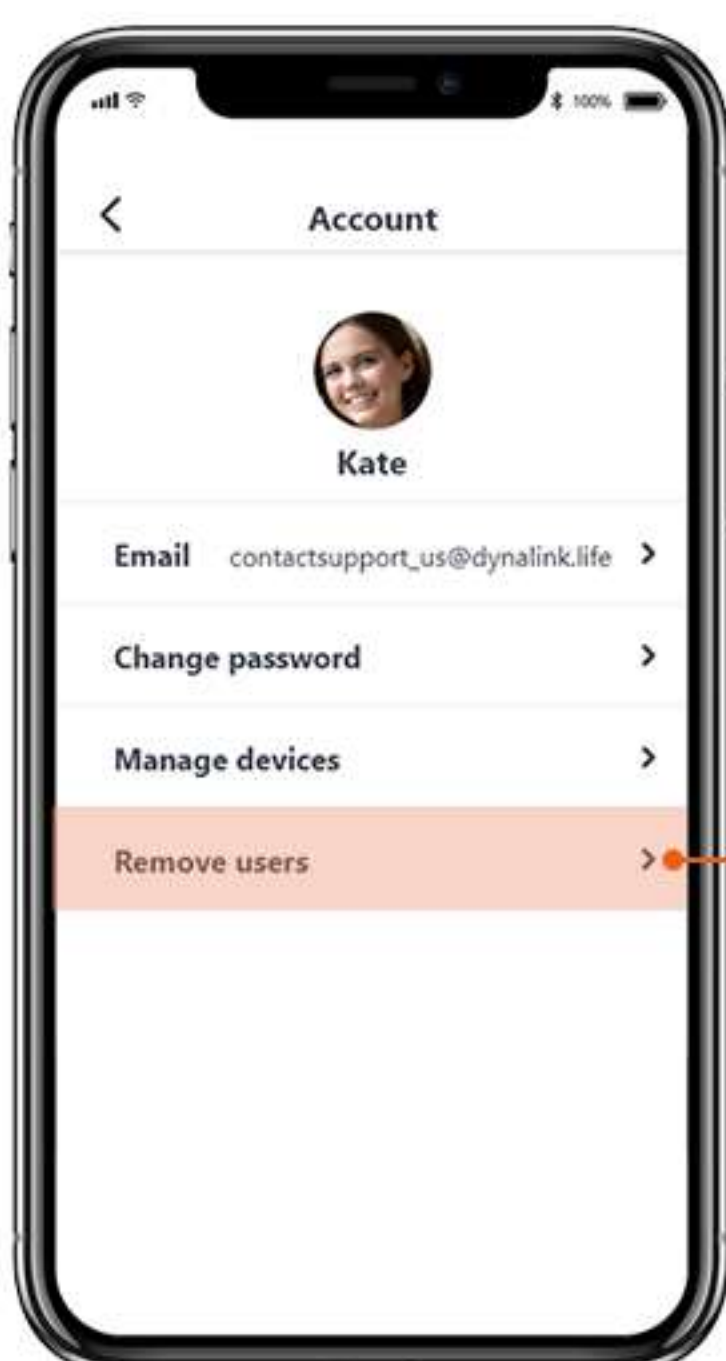

## Remove Users(admin only)

Remove the user you don't recognize. It will permanently delete the files in the removed user's private space.